


UP-CR10L Split Image Feature

1. Double tap top left of screen to generate password keypad display.
2. At the password screen, type **775482** TIP: Telephone Number Pad **SPLITA**.

Note the unit will beep when entering the last two numbers.

3. The following screen will now appear.

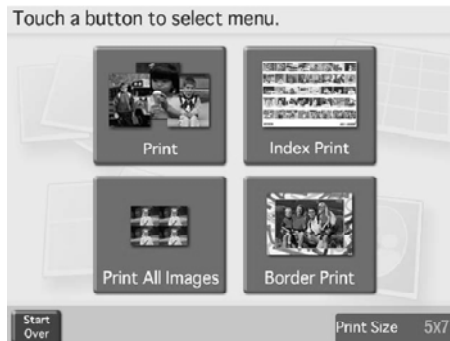

4. Select **Print All Images**.
5. The system will load all images stored on the memory card. Select the Split Image Template to be printed.



6. Confirm your order, and then press "**Start Print**".

