

With the use of a Bluetooth dongle such as the Planex, BT-MicroEDR2X, the SL10™ SnapLab® will accept images from Bluetooth compatible phones etc.

To enable Bluetooth on the SL10

1. The unit must be at firmware version 1.01. This firmware update is available at:

<http://dnpphoto.net/support-e/>

Firmware upgrade module	Windows XP / Vista / 7	Ver.1.01	*W-1	12.4MB	2011.12.26	Download
-------------------------	------------------------	----------	------	--------	------------	----------

2. Insert a USB Bluetooth dongle into the USB-A port in the rear of the SL10.




Example: Planex model BT-MicroEDR2X (sold separately).

3. The SL10 must have an expansion Compact Flash card with the standard SL10 folders.

Workflow

1. Bluetooth will appear as a picture source:

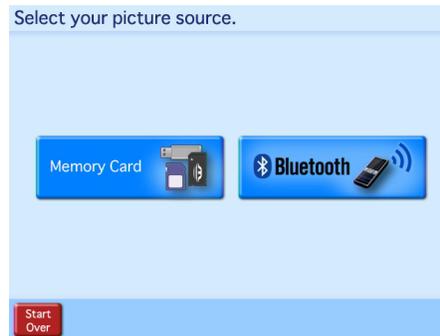

2. Pair your Bluetooth device with the DNP SL10 using the Passkey (PIN) provided.



3. Send your pictures then press OK when the transfer is complete.
4. The pictures are now available for editing and printing.